

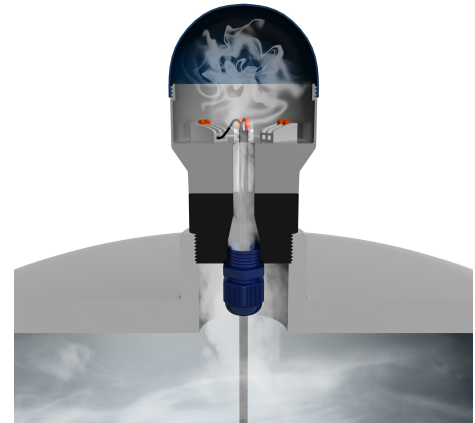


LP 100 SERIES Vaporbloc Installation

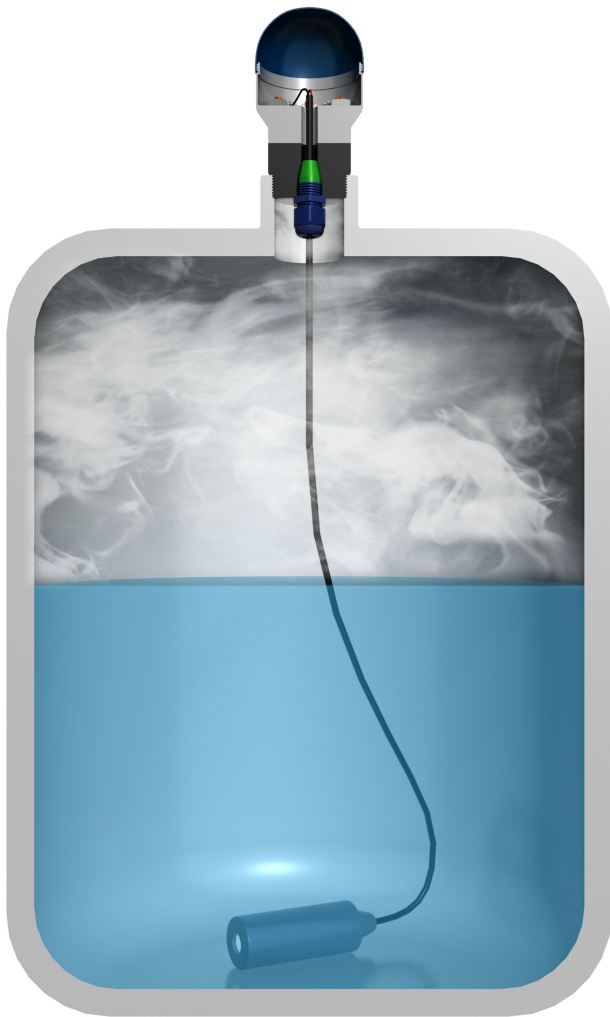

Before

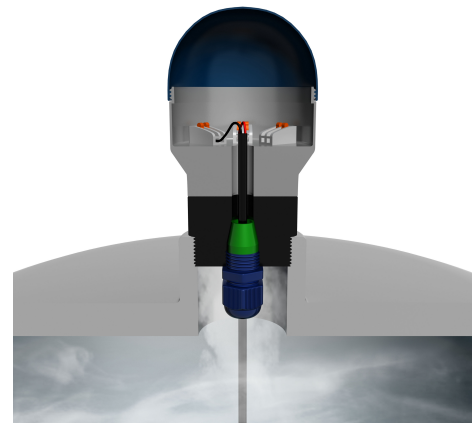

After

 **Corrosion-Free**
Instrumentation Equipment




Read the User's Manual Carefully.
Manufacturer Reserves the Right to Implement Changes Without Prior Notice.

LP 100 Junction Box


Vaporbloc Installation



1

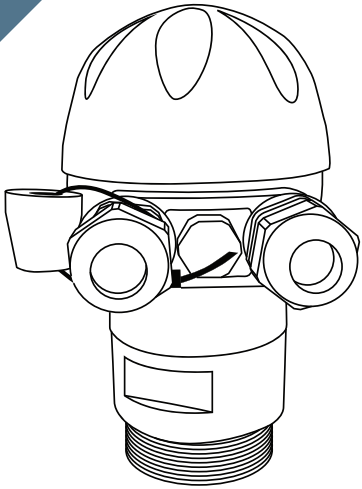


2

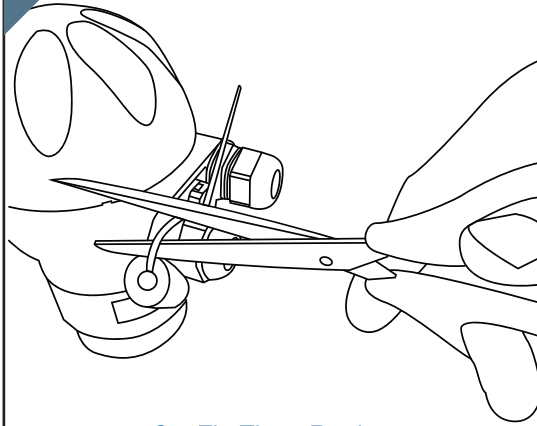


Cut Zip Tie to Retrieve Vaporbloc

3

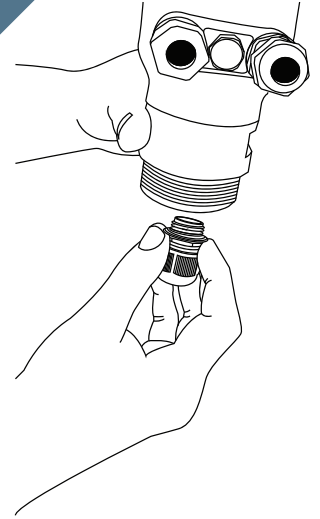


Unscrew Bottom Cord Grip

6

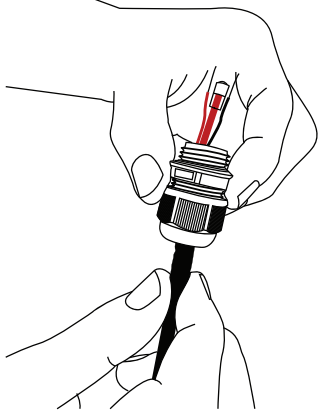


Thread Wire through Cord Grip

4

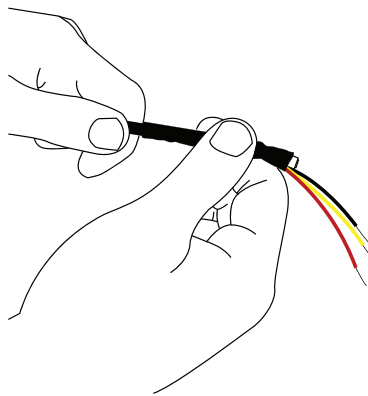


Remove Heat Shrink

5

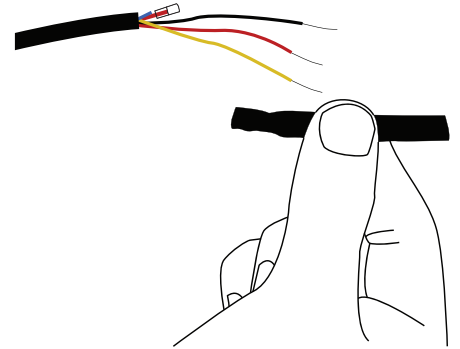


Discard Heat Shrink

7

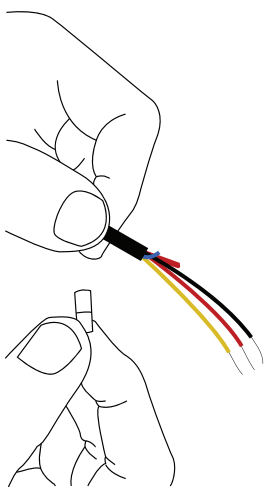


Remove Filter from Vent Tube

8

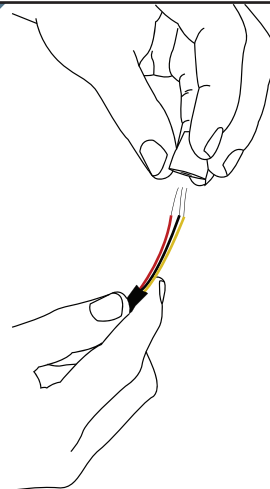

Thread Wire through Vaporbloc

9

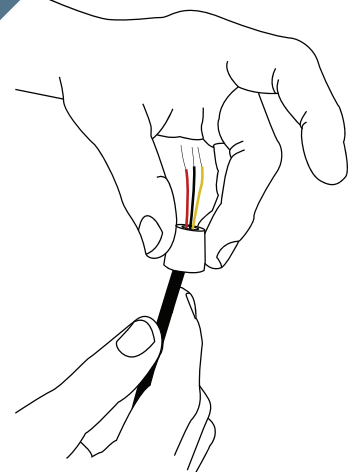


LP 100 Junction Box

Vaporbloc Installation




10

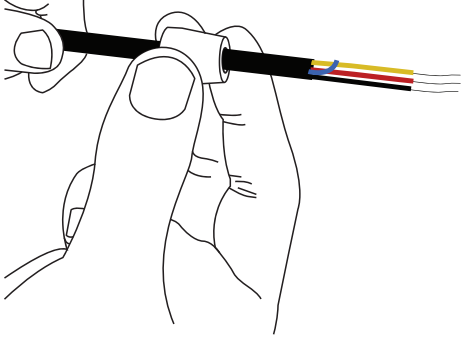


Ensure Vaporbloc has a Snug Fit around Wire

11

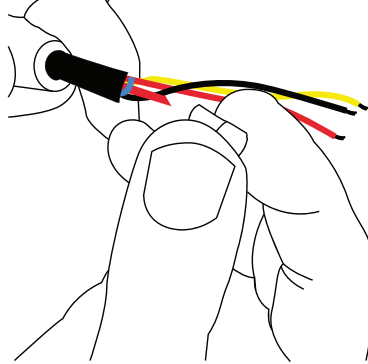


Place Filter back on Vent Tube

12

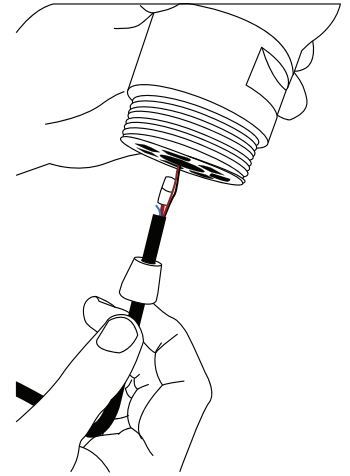


Thread Wire up through bottom of Junction Box

13

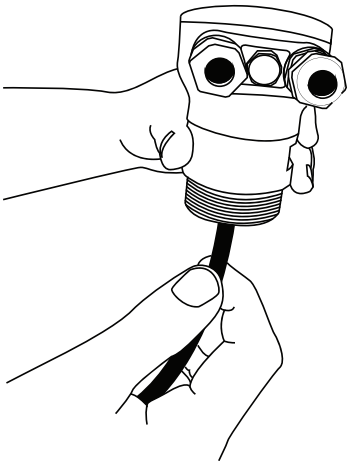


Ensure Vaporbloc is fully Inserted

14

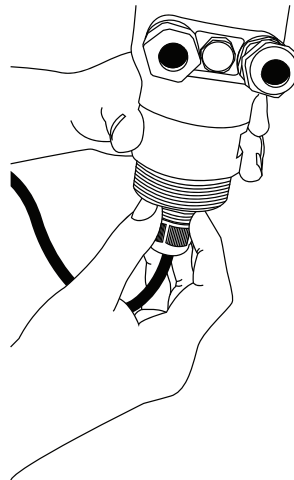

Screw bottom Cord Grip back on Junction Box

15

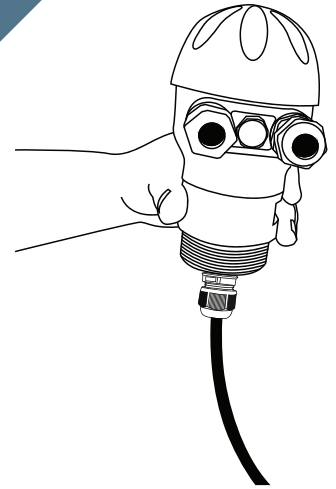

Vaporbloc Installed Successfully!